

Installation Instructions for E2ARETG

BEFORE INSTALLATION, MAKE SURE THE WEAPON IS UNLOADED AND THE SAFETY ENGAGED.

ORIGINAL TRIGGER GUARD REMOVAL.

- 1 Make sure that the rifle is not loaded.
- 2 Depress the spring loaded pin at the front right connection point and remove the trigger guard from between the forward mounting tabs.
On a sturdy work surface, place the rifle on its side and provide support for the trigger guard mount on the bottom.
- 3 Ensure that the spring pin has clearance in the support so that it can be driven out. Note: Failure to support the bottom tab may result in damage to the lower.
- 4 Using an 1/8" punch carefully drive the rear spring pin completely thru both sides of the rear guard mount.
- 5 The old trigger guard should now be free to be removed.

E2ARETG INSTALLATION

- 1 Make sure that the rifle is not loaded.
On a sturdy work surface, place the rifle on its side and provide support for the trigger guard mount on the bottom. Note: Failure to support the bottom tab may result in damage to the lower.
- 2 Position the E2ARETG between the front mounting tabs and install the 5-40 set screw provided until it is flush or just below the tab surface.
Rotate the rear of the E2ARETG between the 2 mounting tabs and align the rear mounting hole with the holes in the lower. Note: Do not attempt to start the pin in the hole without the guard in place. This may result in damage to the lower.
- 3 The old trigger guard should now be free to be removed.
Insert the new 1/8" spring pin provided and, using a small brass mallet, drive the pin thru the mounting tab, E2ARETG and, tab on opposite side.
- 4
- 5
- 6



E2ARETG



MISSION FIRST
TACTICAL



MADE IN
USA
LIFETIME WARRANTY

⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN BODILY INJURY OR DEATH

Mission First Tactical shall not be responsible for injury, death or damage to property resulting from improper installation, misuse or illegal use of this product.